



instruction installations


1. Punch the wall with a 6mm drill and place plastic screw into a 6mm hole.

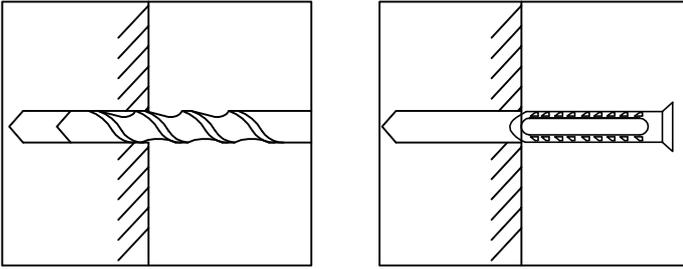


2. Screw the wooden round piece A onto the fixed column B with tapping screws.

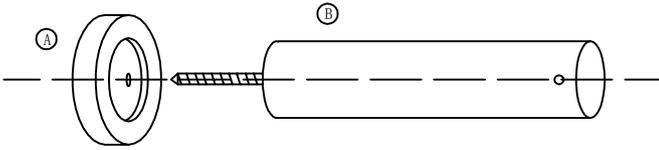


3. Be sure to tighten the fixed column B.

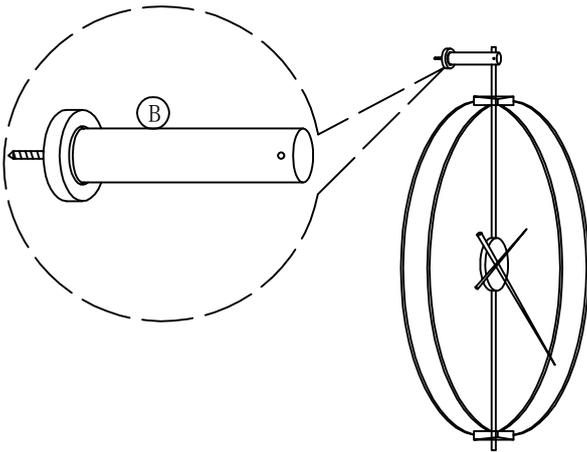


4. Bending the ring and assemble the outer ring of the clock.

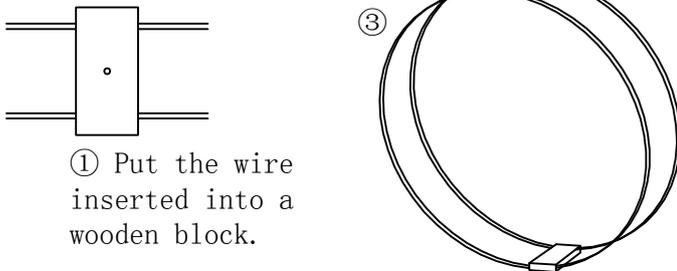


② Bending the ring, put it into another wooden block.




5. Installing the middle rod.

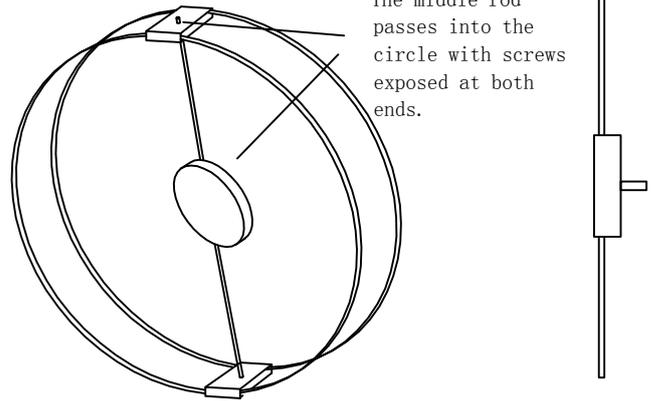


6. Install the upper and lower parts of the intermediate rod.

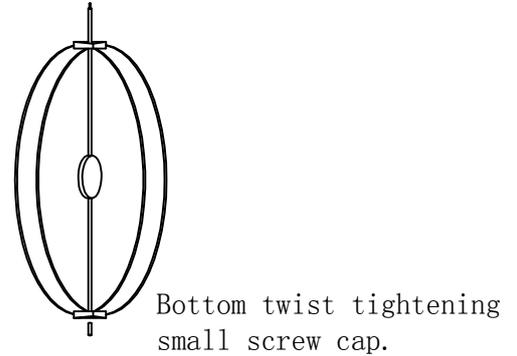

7. Installation of the main part.

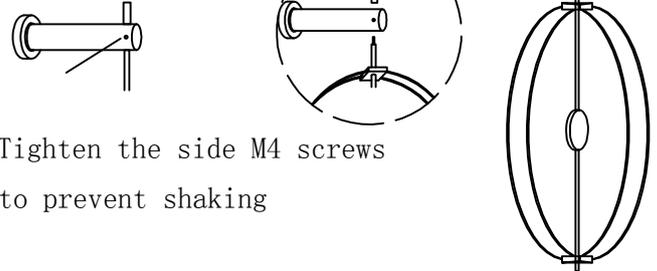

8. Installation Pointer

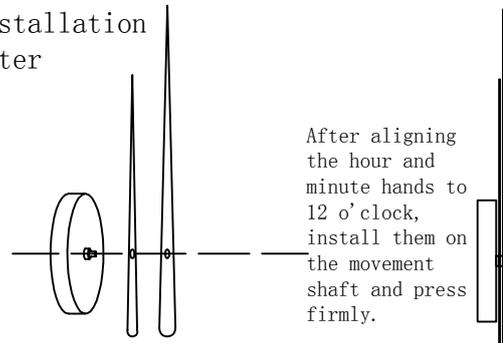

9. Install the battery and adjust the time.

